

# Hytera

QUICK REFERENCE GUIDE



Hytera PD785/PD785G

*DIGITAL PORTABLE RADIO*

数字手持终端

## 1. Instructional Icons

The following icons are available through this guide:



indicates functions that are available on digital channel only.




indicates functions that are available on analog channel only.

Functions marked with no function icons are available on both analog and digital channels.

## 2. Product Overview

### ■ Product Controls

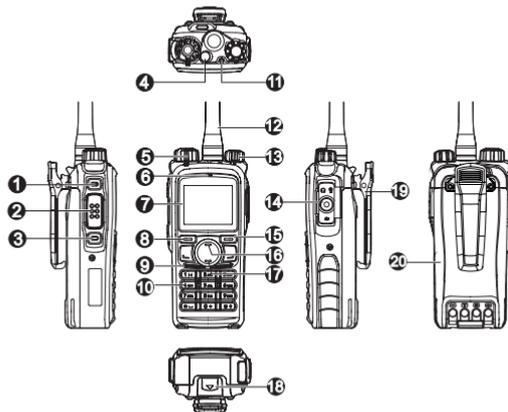

No.	Part Name	No.	Part Name
1	SK1 (Side Key 1)	11	LED Indicator
2	PTT Key	12	Antenna
3	SK2 (Side Key 2)	13	Radio On-Off/ Volume Control Knob
4	TK (Top Key)	14	Accessory Jack
5	Channel Selector Knob	15	Back Key
6	Microphone	16	Up Key
7	LCD Display	17	Down Key
8	OK/Menu Key	18	Battery Latch
9	Speaker	19	Belt Clip
10	Numeric Keypad	20	Battery

### ■ Programmable Keys

You may request your dealer to program the keys **SK1**, **SK2**, **TK**,  and  as shortcuts to radio functions. See the Owner's Manual for more details.

## 3. Status Indication

### ■ LCD Icon

Icon Name	Icon	Radio Status
RSSI		No signal
		More bars indicate better signal strength
Message Icon		New message/unread message
		InBox is full

Scan Icon		Scanning is in progress
		Scanning pauses on a non-priority channel
		Scanning pauses on Priority Channel 1
		Scanning pauses on Priority Channel 2
TX Power Icon		Low TX power for the current channel
		High TX power for the current channel
Battery Strength Icon		More bars indicate more battery power
Monitor Icon		The Monitor feature is active
Speaker Icon		The speaker is unmuted
Emergency Icon		The Emergency mode (other than secret emergency) is active or an emergency message is received
Accessory Icon		An accessory is connected
GPS Icon		The GPS feature is active, and valid GPS data is received
		The GPS feature is active, but no valid GPS data is received

Scrambler/Encrypt Icon		The Scrambler/Encrypt feature is active
Missed Call Icon		A call is missed
DTMF Keypad Icon		The DTMF keypad is enabled
Roam Icon		Roaming is in progress



**Note:** The description related to the GPS feature in this guide is applicable to PD78XG only.

## ■ LED Indicator

LED Indicator	Radio Status
LED flashes green.	Powering on
LED glows red.	Transmitting
LED glows green.	Receiving
LED flashes green slowly.	Scanning
LED flashes orange rapidly.	Emergency
LED glows orange.	After voice communication ends, you can hold down the <b>PTT</b> key to talk while the LED is glowing orange.

## 4. Basic Operations

### ■ Turning the Radio On/Off

Rotate the **Radio On-Off/Volume Control** knob clockwise/counter-clockwise until a click is heard to turn the radio on/off.

## ■ Adjusting the Volume

After turning the radio on, rotate the **Radio On-Off/Volume Control** knob clockwise to increase the call volume, or counter-clockwise to decrease it.

## ■ Selecting a Zone

The radio supports up to 64 zones, each with a maximum of 16 channels. You may select a zone through any of the following methods:

1. Through menu selection

Go to the menu "Zone", and use the **Up/Down** key to select your desired zone.

2. Through the function keys

You may quickly toggle to your desired zone by pressing the programmed **Zone Up** or **Zone Down** key.

## ■ Selecting a Channel

After turning the radio on, rotate the **Channel Selector** knob to select a desired channel. If the Channel Notify feature is enabled by your dealer, the radio will broadcast the channel number upon channel selection. The broadcasting language (only Chinese and English are available currently) is preset by your dealer.

## ■ Switching the Channel Mode

Each channel can be programmed as either analog channel or digital channel. If the current zone includes both analog and digital channels, you may quickly switch between digital and analog through the **Channel Selector** knob.

## ■ Locking/Unlocking the Keypad

When the keypad is not in use, you can lock the keypad to prevent accidental keypad operation. The following methods are available for you to lock or unlock the keypad:

1. Through key combination

Use "OK+" to lock or unlock the keypad.

2. Through the function key

Press the programmed **Keypad Lock** key to lock or unlock the keypad.

3. Through menu selection

Go to "Settings -> Radio Set -> Keypad Lock", and then select "Enable" or "Disable".

Enable: The keypad will be locked automatically if no operation is made within the preset time period.

Disable: The keypad will not be locked automatically. However, you can lock or unlock the keypad via the key combination or **Keypad Lock** key mentioned above.



**Note:** When the feature "Keypad Auto Lock" is enabled, the keypad will be locked automatically if no operation is made within the preset time period. You can use the "Disable" option in the menu "Keypad Lock" to deactivate the feature "Keypad Auto Lock".

## 5. Call

To ensure an optimal volume of the receiving radio, hold the radio approximately 2.5 to 5 centimeters away from your mouth.

## ■ Private Call

### Transmitting a Private Call

You may transmit a Private Call through any of the following methods. When transmitting a Private Call, the icon  will appear.

- Transmitting a call to the preset contact

In the home screen, hold down the **PTT** key to transmit a Private Call to the Private Call contact preset for the current channel.



**Note:** Your dealer may preset a contact for each digital channel. The preset contact could be a Private Call contact, a Group Call contact or an All Call contact.

- Transmitting a call through Contact List or Call Logs
- 1) Go to "Contact -> Contact List", or go to "Call Logs" and access the Outgoing/Incoming/Missed list.
  - 2) Use the **Up/Down** key to select the Private Call contact you want to call.
  - 3) Hold down the **PTT** key to transmit a Private Call.
- Through manual input
- 1) Go to "Contact -> Manual Dial".
  - 2) Input a Private Call contact you want to call.
  - 3) Hold down the **PTT** key to transmit the Private Call.



#### Note:

- If your radio supports both Private Call Manual Dial and Group Call Manual Dial, you can switch between them by pressing . The LCD will display appropriate ID.
- If the Default Numeric Key Selection feature is enabled by your dealer, you can enter a Private Call number in the home screen, and then hold down the **PTT** key to transmit the Private Call. However, if the DTMF keypad is enabled, the number entered in the home screen is a phone number. You can dial the Group Call number through the menu "Manual Dial" only.

### Receiving and Responding to a Private Call

When a Private Call is received, your radio will display the icon



You may hold down the **PTT** key within the preset time period to call back. If you do not respond to a received Private Call, your radio will display the missed call icon .



#### Note:

- If the Display Missed Call feature is enabled by your dealer, your radio will display the missed call icons  and .
- If the Display Missed Call feature is not enabled by your dealer, your radio will display the missed call icon  only.

## ■ Group Call

### Transmitting a Group Call

You may transmit a Group Call through any of the following methods. When transmitting a Group Call, the icon  will appear.

#### 1. Transmitting a call to the preset contact

In the home screen, hold down the **PTT** key to transmit a Group Call to the Group Call contact preset for the current channel.

#### 2. Transmitting a call through Contact List

- 1) Go to “Contact -> Contact List” .
- 2) Use the **Up/Down** key to select the Group Call contact you want to call.

#### 3) Hold down the **PTT** key to transmit the Group Call.

#### 3. Through manual input

- 1) Go to “Contact -> Manual Dial” .
- 2) Input a Group Call contact you want to call.
- 3) Hold down the **PTT** key to transmit the Group Call.



#### Note:

- If your radio supports both Private Call Manual Dial and Group Call Manual Dial, you can switch between them by pressing  . The LCD will display appropriate ID.
- If the Default Numeric Key Selection feature is enabled by your dealer, you can

enter a Group Call number in the home screen, and then hold down the **PTT** key to transmit the Group Call. However, if the DTMF keypad is enabled, the number entered in the home screen is a phone number. You can dial the Group Call number through the menu “Manual Dial” only.

### Receiving and Responding to a Group Call

When a Group Call is received, your radio will display the icon  .

You may hold down the **PTT** key within the preset time period to call back.

## ■ All Call

### Transmitting an All Call

Two methods are available for transmitting an All Call: transmitting a call to the preset contact; transmitting a call through Contact List. They are the same as those in Transmitting a Group Call. When transmitting an All Call, the icon  will appear.



**Note:** You can transmit an All Call only when it is enabled by your dealer.

### Receiving an All Call

When an All Call is received, your radio will display the icon  .



**Note:** You cannot respond to an All Call.

## ■ Calls on Analog Channels

To transmit on an analog channel, hold down the **PTT** and speak into the microphone. To receive, release the **PTT** key.

## ■ Phone

If the repeater is connected with a PSTN gateway (such as Zetron M30), the radio can communicate with the phone via it.

### Transmitting a phone call:

1. Access the phone system.

- Live Dial

Hold down the **PTT** key, and enter the access code via the keypad. Then release the **PTT** key. The radio beeps and displays the dialing information. When the phone system is accessed successfully, the radio goes to the DTMF keypad mode.

- Buffer Dial

1) Enter the DTMF keypad mode. The following methods are available to enter this mode.

- Go to "Menu -> Phone -> Manual Dial" to enter the DTMF keypad mode.
- Press the programmed **DTMF Keypad** key.
- Go to "Menu -> Phone -> DTMF Keypad", and then select "Enable". The number entered via the keypad in the home screen is the DTMF code.

2) Access the phone system: Enter the access code via the keypad and then press the **PTT** key. The radio beeps and displays the dialing information. When the phone system is accessed successfully, the radio goes to the DTMF keypad mode again.

2. Make the phone call.

- Live Dial: Hold down the **PTT** key and enter the phone number via the keypad. Release the **PTT** key after the complete number is entered.

- Buffer Dial: Enter the phone number via the keypad and then hold down the **PTT** key.

- Select "Back". Then go to "Menu -> Phone -> Phone List" to select a desired contact, and press the **PTT** key.

3. After the call is established, you can hold down the **PTT** key to talk, and release it to listen.

To end the call, you can send the de-access code (the input method is the same as that for the access code) to exit the phone system.

If the phone is hung up, the call will be ended and the phone system will be exited too.

### Receiving a phone call:

When the radio receives a phone call, the icon  or  will appear.

You may hold down the **PTT** key within the preset time period to call back. If you do not respond to it, your radio will provide appropriate indications. The indication information is the same as that for the Private Call.

## Hytera

is the trademark or registered trademark of Hytera Communications Corp., Ltd.  
© 2012 Hytera Corp., Ltd. All Rights Reserved.

Address: HYT Tower, Hi-Tech Industrial Park North, Beihuan  
RD., Nanshan District, Shenzhen, China  
Postcode: 518057  
<http://www.hytera.com>



## Hytera

是海能达通信股份有限公司的商标或注册商标  
© 2012 Hytera Corp., Ltd. 版权所有

地址: 深圳市高新技术产业园北区北环路好易通大厦  
邮编: 518057  
服务热线: 400-830-7020  
<http://www.hytera.com>